
LYNC-817 Series

**Fanless 17" Industrial Panel PC with
Intel® Celeron® J1900 2.0GHz**

User's Manual

Version 1.2

Revision History

Version	Time	Description
1.0	2014/11	Initial release
1.1	2015/01	P.3: Revise BIOS, Expansion Bus AMI--> Insyde Mini-card socket (USB Interface) P.6, 31, 50, 51, 52: Remove WiFi-AT2350 Module description P.6: Add CTOS MM-3C-4G
1.2	2017/12	"1.5.2. Configure-to-Order Service" updated with ELPP-0101-C224, ANT-D11 and WiFi-AT2350 "A.1. Install Wi-Fi Module" Revise intallation method by using riser card

Revision History	ii
Contents	i
Preface.....	iii
Copyright Notice	iii
Declaration of Conformity	iii
CE.....	iii
FCC Class A	iii
RoHS	iv
SVHC / REACH	iv
Important Safety Instructions	v
Warning.....	vi
Lithium Battery Replacement.....	vi
Technical Support	vi
Warranty.....	vii
Chapter 1 - Introduction.....	1
1.1. The Computer	2
1.2. About this Manual	2
1.3. Specifications.....	3
1.4. Inside the Package	5
1.5. Ordering Information.....	5
1.5.1. Optional Accessories	6
1.5.2. Configure-to-Order Service.....	6
Chapter 2 - Getting Started.....	7
2.1. Dimensions	8
2.2. Tour the Computer	9
2.2.1. Front View.....	9
2.2.2. Rear View	10
2.2.3. Bottom View.....	11
2.2.4. Side View.....	12
2.2.5. Top View	12
2.3. Driver Installation Note.....	13
Chapter 3 - Engine of the Computer.....	14
3.1. Board Layout.....	15
3.2. Jumpers and Connectors.....	16
3.2.1. Jumpers	16
3.2.2. Connectors	19

- Chapter 4 - Installation and Maintenance.....27**
 - 4.1. Use Onboard Jumpers and Connectors 28
 - 4.2. Install Hardware 29
 - 4.2.1. Install SSD or HDD 29
 - 4.2.2. Install CFAST Card 30
 - 4.2.3. Install Wi-Fi Module 31
 - 4.2.4. Install PCI or PCIe Card 31
 - 4.2.5. Install 2nd CFAST module 33
 - 4.3. Mount the Computer 34
 - 4.3.1. Panel Mounting 34
 - 4.3.2. VESA Mounting 35
 - 4.4. Wire DC-Input Power Source 36
- Chapter 5 - BIOS37**
 - 5.1. Main 40
 - 5.2. Advanced 41
 - 5.2.1. Boot Configuration 42
 - 5.2.2. PCI Express Configuration 42
 - 5.2.3. Miscellaneous Configuration 43
 - 5.2.4. SATA Configuration 43
 - 5.2.5. SIO Fintek 81216 43
 - 5.3. Security 44
 - 5.4. Power 45
 - 5.5. Boot 46
 - 5.6. Exit 47
- Appendices49**
 - Appendix A: Wi-Fi Module Hardware/Software Installation 50
 - A.1. Install Wi-Fi Module 50
 - Appendix B: PenMount Utilities 55
 - B.1. PenMount Control Panel 55
 - B.2. PenMount Gesture 60

Copyright Notice

All Rights Reserved.

The information in this document is subject to change without prior notice in order to improve the reliability, design and function. It does not represent a commitment on the part of the manufacturer.

Under no circumstances will the manufacturer be liable for any direct, indirect, special, incidental, or consequential damages arising from the use or inability to use the product or documentation, even if advised of the possibility of such damages.

This document contains proprietary information protected by copyright. All rights are reserved. No part of this document may be reproduced by any mechanical, electronic, or other means in any form without prior written permission of the manufacturer.

Declaration of Conformity

CE

The CE symbol on your product indicates that it is in compliance with the directives of the Union European (EU). A Certificate of Compliance is available by contacting Technical Support.

This product has passed the CE test for environmental specifications when shielded cables are used for external wiring. We recommend the use of shielded cables. This kind of cable is available from ARBOR. Please contact your local supplier for ordering information.

Warning

This is a class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.

FCC Class A

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE:

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

RoHS

ARBOR Technology Corp. certifies that all components in its products are in compliance and conform to the European Union's Restriction of Use of Hazardous Substances in Electrical and Electronic Equipment (RoHS) Directive 2002/95/EC.

The above mentioned directive was published on 2/13/2003. The main purpose of the directive is to prohibit the use of lead, mercury, cadmium, hexavalent chromium, polybrominated biphenyls (PBB), and polybrominated diphenyl ethers (PBDE) in electrical and electronic products. Member states of the EU are to enforce by 7/1/2006.

ARBOR Technology Corp. hereby states that the listed products do not contain unintentional additions of lead, mercury, hex chrome, PBB or PBDB that exceed a maximum concentration value of 0.1% by weight or for cadmium exceed 0.01% by weight, per homogenous material. Homogenous material is defined as a substance or mixture of substances with uniform composition (such as solders, resins, plating, etc.). Lead-free solder is used for all terminations (Sn(96-96.5%), Ag(3.0-3.5%) and Cu(0.5%)).

SVHC / REACH

To minimize the environmental impact and take more responsibility to the earth we live, Arbor hereby confirms all products comply with the restriction of SVHC (Substances of Very High Concern) in (EC) 1907/2006 (REACH --Registration, Evaluation, Authorization, and Restriction of Chemicals) regulated by the European Union.

All substances listed in SVHC < 0.1 % by weight (1000 ppm)

Important Safety Instructions

Read these safety instructions carefully

1. Read all cautions and warnings on the equipment.
2. Place this equipment on a reliable surface when installing. Dropping it or letting it fall may cause damage
3. Make sure the correct voltage is connected to the equipment.
4. For pluggable equipment, the socket outlet should be near the equipment and should be easily accessible.
5. Keep this equipment away from humidity.
6. The openings on the enclosure are for air convection and protect the equipment from overheating. **DO NOT COVER THE OPENINGS.**
7. Position the power cord so that people cannot step on it. Do not place anything over the power cord.
8. Never pour any liquid into opening. This may cause fire or electrical shock.
9. Never open the equipment. For safety reasons, the equipment should be opened only by qualified service personnel.
10. If one of the following situations arises, get the equipment checked by service personnel:
 - a. The power cord or plug is damaged.
 - b. Liquid has penetrated into the equipment.
 - c. The equipment has been exposed to moisture.
 - d. The equipment does not work well, or you cannot get it to work according to the user's manual.
 - e. The equipment has been dropped or damaged.
 - f. The equipment has obvious signs of breakage.
11. Keep this User's Manual for later reference.

Warning

The Box PC and its components contain very delicately Integrated Circuits (IC). To protect the Box PC and its components against damage caused by static electricity, you should always follow the precautions below when handling it:

1. Disconnect your Box PC from the power source when you want to work on the inside.
2. Use a grounded wrist strap when handling computer components.
3. Place components on a grounded antistatic pad or on the bag that came with the Box PC, whenever components are separated from the system.

Lithium Battery Replacement

Incorrect replacement of the lithium battery may lead to a risk of explosion.

The lithium battery must be replaced with an identical battery or a battery type recommended by the manufacturer.

Do not throw lithium batteries into the trash can. It must be disposed of in accordance with local regulations concerning special waste.

Technical Support

If you have any technical difficulties, please consult the user's manual first at:
<ftp://ftp.arbor.com.tw/pub/manual>

Please do not hesitate to call or e-mail our customer service when you still cannot find out the answer.

<http://www.arbor-technology.com>

E-mail:info@arbor.com.tw

Warranty

This product is warranted to be in good working order for a period of one year from the date of purchase. Should this product fail to be in good working order at any time during this period, we will, at our option, replace or repair it at no additional charge except as set forth in the following terms. This warranty does not apply to products damaged by misuse, modifications, accident or disaster.

Vendor assumes no liability for any damages, lost profits, lost savings or any other incidental or consequential damage resulting from the use, misuse of, or inability to use this product. Vendor will not be liable for any claim made by any other related party.

Vendors disclaim all other warranties, either expressed or implied, including but not limited to implied warranties of merchantability and fitness for a particular purpose, with respect to the hardware, the accompanying product's manual(s) and written materials, and any accompanying hardware. This limited warranty gives you specific legal rights.

Return authorization must be obtained from the vendor before returned merchandise will be accepted. Authorization can be obtained by calling or faxing the vendor and requesting a Return Merchandise Authorization (RMA) number. Returned goods should always be accompanied by a clear problem description.

This page is intentionally left blank.

Chapter 1

Introduction

1.1. The Computer

Product Highlights

- Cable-less , Fanless Design
- User Selectable Modularized Design
- 17" 1280 x 1024 SXGA LCD Display w/ LED Backlight
- Front Panel IP65 Compliant
- Serial Ports (RS-485), w/ Auto-flow Control
- Mini-card Sockets x 1, PCI x 1 or PCIe x 1
- Semi-Piercing DB9 Hole Reserved for Field-bus Card
- SMA Antenna Holes for Optional WiFi Function
- 9~36V Wide Range DC Input



1.2. About this Manual

This manual is meant for the experienced users and integrators with hardware knowledge of personal computers. If you are not sure about the description in this manual, consult your vendor before further handling.

We recommend that you keep one copy of this manual for the quick reference for any necessary maintenance in the future. Thank you for choosing ARBOR products.

1.3. Specifications

System	
CPU	Intel J1900 Quad-Core™ Processor 2.0GHz
Memory	1 x DDR3L SO-DIMM Socket, supporting 1066/1333 MHz SDRAM up to 8GB
	1 x 4GB DDR3L SO-DIMM memory module installed
LAN	2 x Intel® I210AT GbE controllers
Watchdog Timer	1~255 levels reset
Storage	
1st Device	1 x outside-accessible CFast slot
2nd Device	1 x outside accessible 2.5" Drive Bay (Default), or CFast slots (Optional)
LCD Display	
Size/Type	17" TFT LCD Panel
Max. Resolution	1280 x 1024, SXGA
Max. Colors	16.2M
Luminance	350 cd/m ²
Touch Screen	5-wire Analog Resistive
Button & Indicator	
Function Key	Power on/off
LED Indicator	Power on LED
Power System	
Power Input	DC 9~36V
Power Consumption	Max. 28.0W (w/o I/O cards)
Qualification	
Certification	CE, FCC Class A
Expansion	

Introduction

Expansion Bus	1 x Mini-card socket (full-size) (USB only)
	1 x PCI 32-bit slot (default) or 1 x PCIe x1 slot (both Riser Cards are included in Standard Accessories)
Optional	1 x semi-piercing DB9 hole reserved
External I/O	
Serial Ports	2 x RS-232 and 2 x RS232/485 ports with auto-flow design, all are DB9 connectors
USB Ports	1 x USB 3.0 Type-A USB port
	3 x USB 2.0 Type-A ports
LAN	2 x RJ-45 GbE ports
DVI	1 x DVI-I connector
WiFi	2 x SMA antenna holes are for optional WiFi function
Audio	Line-out
Mechanical	
Mounting Type	Panel Mounting and VESA-75/100 Mounting
Chassis	Panel-mounting chassis, aluminum front bezel and SECC steel chassis
Dimension (W x H x D)	428.00 x 380.00 x 77.00 mm (16.8" x 14.9" x 3.0")
Weight (Net)	6.5 kg (14.3 lb)
Environmental	
Operating Temp.	-0°C ~ 55°C (-32 ~ 131°F)
Storage Temp.	-10°C ~ 75°C (-50 ~ 167°F)
Operating Humidity	10 ~ 95% RH @ 55°C (non-condensing)
Vibration	5 ~ 500Hz, 2Grms Random (with CF/SSD)
Shock	Operating 10G, 11ms
	Non-operating 30G, 11ms (with CF/SSD)
OS Support	
W7 Pro / WS7E / W8.1 Industry	

1.4. Inside the Package

Upon opening the package, carefully inspect the contents. If any of the items is missing or appears damaged, contact your local dealer or distributor. The package should contain the following items:



1 x LYNC-817 industrial panel PC



1 x **Accessory Box** that contains the following items:

- Driver CD
- User's manual
- Screws/cable
- 3-pin plug for terminal block

1.5. Ordering Information

LYNC-817 17" Intel® Celeron® Processor J1900 industrial panel PC

1.5.1. Optional Accessories

The following items are normally optional, but some vendors may include them in the standard package, or some vendors may not carry all the items.

PAC-P060W-02 12V/5A 60W AC/DC power adapter kit



1.5.2. Configure-to-Order Service

Make the computer more tailored to your needs by selecting one or more components from the list below to be fabricated to the computer.


150G SSD Intel® 2.5" 150GB SATAIII SSD Kit



MM-3C-4G 4GB DDR3-1333 SDRAM



ELPP-0101-C224 PCIe x 1 to mPCIe adapter card
(inserted to PCIe x 1 Riser card for optional WiFi module installation)

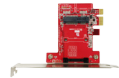

ANT-D11 2.4G/5G Dual-band WiFi Antenna



WiFi-AT2350 Atheros AR9462 WiFi Module w/ 20cm & 30cm internal wiring




Chapter 2

Getting Started

2.1. Dimensions

The following illustration shows the dimensions of the computer, with the measurements in width, depth, and height called out.

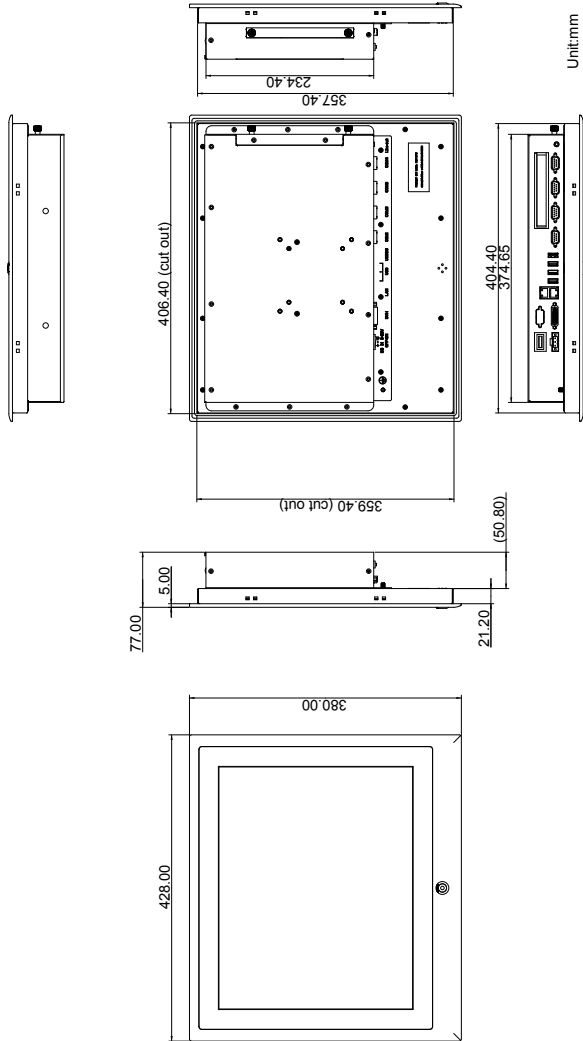


2.2. Tour the Computer

Take a look around the computer and find the external controls and connectors.

2.2.1. Front View

On the front side of the computer is a LCD display, with one Power button.

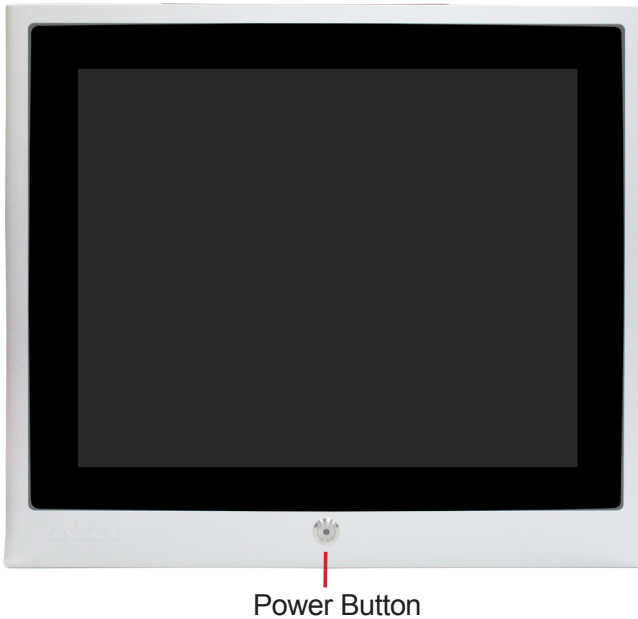


2.2.2. Rear View



2.2.3. Bottom View

The bottom side of the computer is where the computer's I/O ports are.

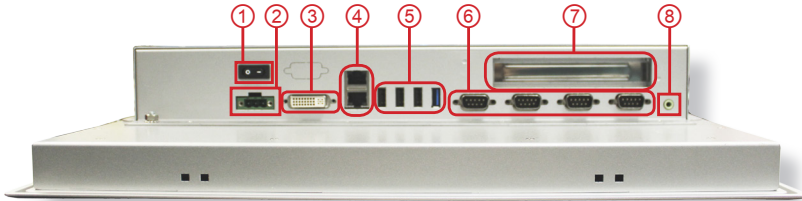


No.	Description	
①	Power switch	
②	DC-IN	
③	DVI port	
④	2 x LAN ports	
⑤	4 x USB ports	
⑥	COM1	COM1 and COM2 are RS-232/485 configurable. COM3 and COM4 are RS-232.
	COM2	
	COM3	
	COM4	
⑦	PCI slot	
⑧	Line-out	

2.2.4. Side View



2.2.5. Top View

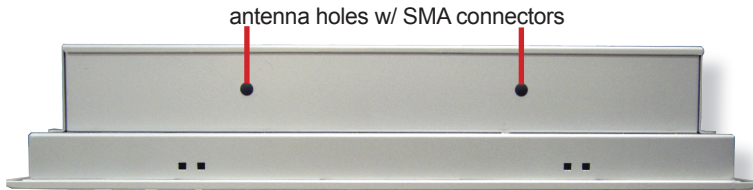

2.3. Driver Installation Note

The computer supports the operating systems Windows 7 and Windows 8. Find the necessary device drivers on the CD that comes with your purchase. Always follow the sequence below to install all drivers to prevent errors:

Chipset→**Graphics**→**Audio**→**LAN**→**touch**

Windows 7

Device	Driver Path
Chipset	\\CHIPSET\WIN7\infnst_autol
Graphics	\\GRAPHIC\WIN7\Intel_EMGD_WIN7_32bit_V_36_15_0_1073\SETUP
	\\GRAPHIC\WIN7\Intel_EMGD_Win7_64bit_V_37_15_0_1073\SETUP
Audio	\\AUDIO\RTL_AUDIO_Win7_Win8_Win81_32bit_R273
	\\AUDIO\RTL_AUDIO_Win7_Win8_Win81_64bit_R273
LAN	\\LAN\WIN7\PROWin32
	\\LAN\WIN7\PROWin64
Touch*	\\TOUCH\ PenMount Windows Universal Driver V2.4.2.325(WHQL)
TXE	\\TXE\setup
KMDF	\\KMDF\kmdf-1.11-Win-6.1-x64.msu
	\\KMDF\kmdf-1.11-Win-6.1-x86.msu
USB 3.0	\\USB 3.0\WIN7\Intel_USB30_Win7_32_64bit_V3.0.0.19
NET FRAMEWORK	\\ NET Framework 3.5

Windows 8


Device	Driver Path
Chipset	\\CHIPSET\WIN8\infnst_autol
Graphics	\\ GRAPHIC\WIN8\32bit\Win32\SETUP
	\\GRAPHIC\ WIN8\64bit\win64\SETUP
Audio	\\AUDIO\RTL_AUDIO_Win7_Win8_Win81_32bit_R273
	\\AUDIO\RTL_AUDIO_Win7_Win8_Win81_64bit_R273
LAN	\\LAN\WIN8\PROWin32
	\\LAN\WIN8\PROWin64
Touch	\\TOUCH\ PenMount Windows Universal Driver V2.4.2.325(WHQL)
TXE	\\TXE\setup
MBI	\\INTEL MBI\SETUP
NET FRAMEWORK	\\ NET Framework 3.5

*Note: Refer to [Appendix B: PenMount Utilities on page 55](#) for how to use touch panel.

Chapter 3

Engine of the Computer

3.1. Board Layout

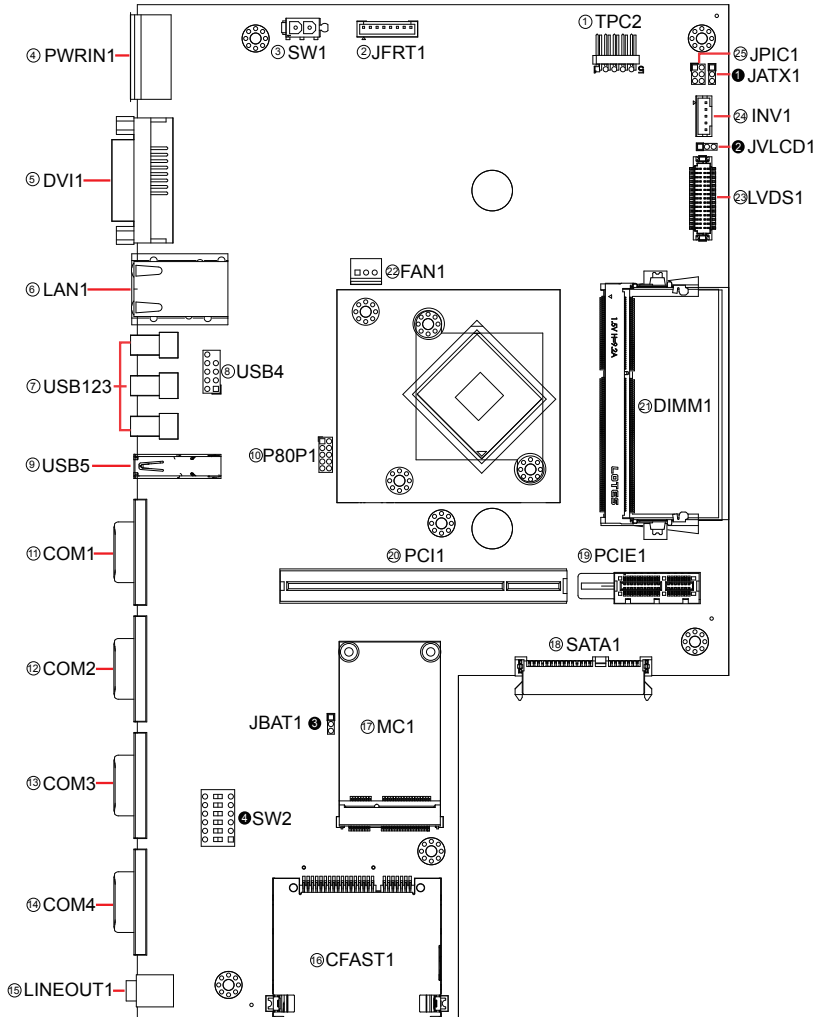

3.2. Jumpers and Connectors


This chapter will explicate each of the jumpers and connectors on the carrier board of the computer.

3.2.1. Jumpers

JATX1

Function: power supply mode setting

Jumper Type: 2.00mm-pitch 1x3-pin header

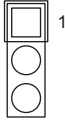


Setting:

Pin	Description	Setting
1-2	AT	
2-3	ATX (default)	

JVLCD1


Function: LCD power selection

Jumper Type: 2.00mm-pitch 1x3-pin header

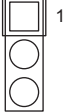


Setting:

Pin	Description	Setting
1-2	3.3V	
2-3	5V (default)	

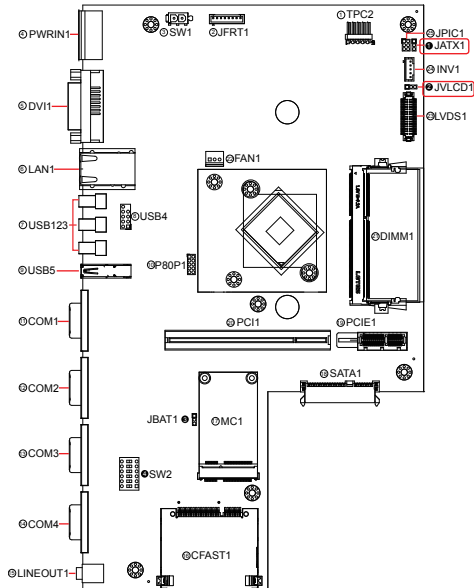


JBAT1

Function: RTC setting
Jumper Type: 2.00mm-pitch
 1x3-pin header

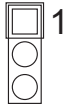

Setting:

Pin	Description	Setting
1-2	keep CMOS (default)	
2-3	clear CMOS	

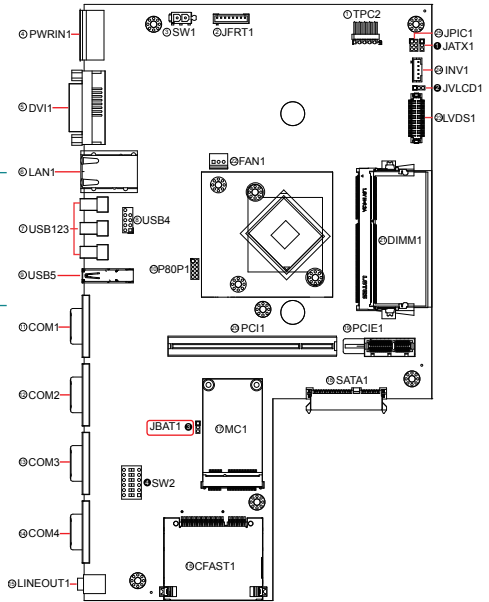








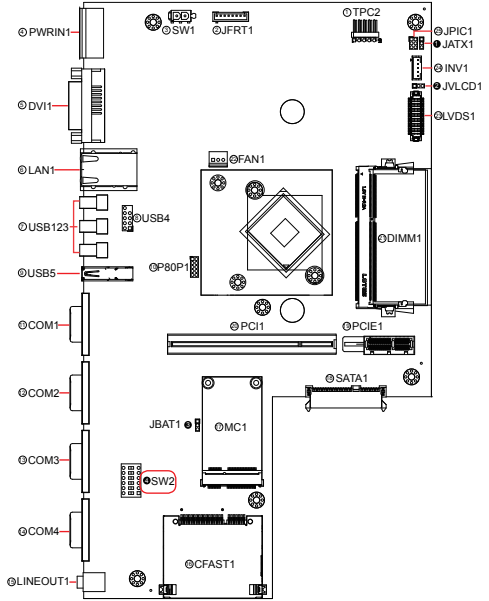
SW2

Function: RS232/485 MODE Switch

Jumper Type: 1 x 6-pin DIP Switch

Setting:

Toggle	Description	DIP Switch Diagram
1~6 OFF	COM1&COM2 are RS-232 mode	
1-ON 2~6 OFF	COM1 RS485 MODE	
1-OFF	COM1 RS232 MODE	
1~2 ON 3~6 OFF	COM1 RS485 with terminator	
3-ON 1,2,4~6 OFF	COM2 RS485 MODE	
3-OFF	COM2 RS232 MODE	
3~4 ON 1~2, 5~6 OFF	COM2 RS485 with terminator	



3.2.2. Connectors



TPC2

Function: Touch panel connector

Connector Type: 2.54mm-pitch 1x5-pin header

Setting:

Pin	Description
1	Y+
2	X+
3	Sense
4	Y-
5	X-

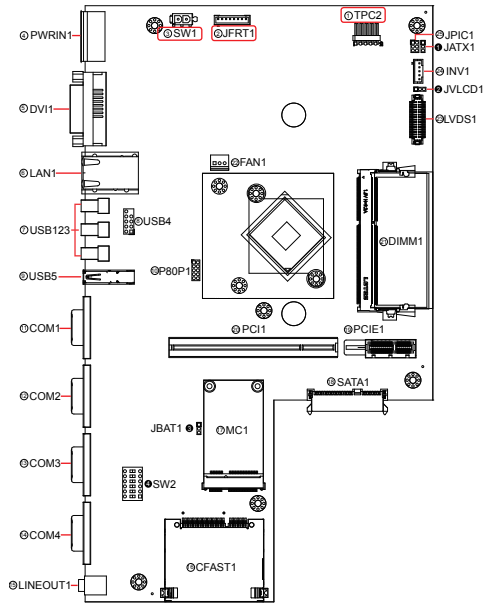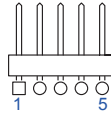


JFRT1

Function: Front pin header

Connector Type: 2.00mm-pitch 1x8-pin 4-wall wafer connector


Setting:

Pin	Description
1	+PLED
2	-PLED
3	+HDLED
4	-HDLED
5	PWR_IN_SW#
6	GND
7	RST
8	GND

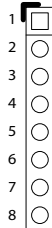


SW1

Function: Power switch cable connector

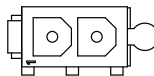

PWRIN1

Function: power input
Connector Type: 5.00mm-pitch 3-pole male-type euro-style terminal block

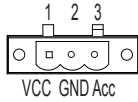


Setting:

Pin	Description
1	VCC_IN 9~36V
2	GND
3	NC


DVI1

Function: DVI-I port (digital)
Connector Type: 29-pin DIP-type female connector

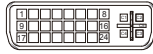

LAN1

Function: RJ-45 Ethernet connectors
Connector Type: 10/100/1000Mbps Fast Ethernet
Setting:

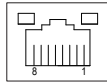


Pin	Description	Pin	Description
1	MDI0	5	MDI2
2	MDI0#	6	MDI2#
3	MDI1	7	MDI3
4	MDI1#	8	MDI3#

USB1,2,3

Function: USB2.0 ports
Connector Type: USB2.0 type A connector
Setting:


Pin	Description
1	5V
2	USB D-
3	USB D+
4	GND

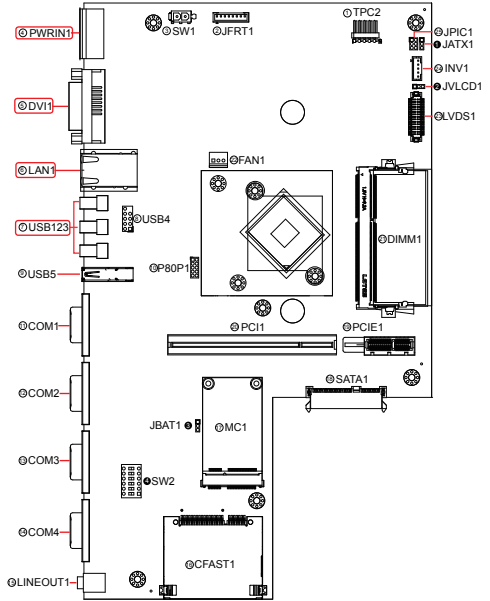

USB4

Function: USB2.0 pin header

Connector Type: 2.54mm-pitch
2x5-pin header

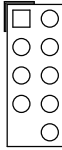


Setting:

Pin	Description	Pin	Description
1	+5V	2	+5V
3	USB D-	4	USB D-
5	USB D+	6	USB D+
7	GND	8	GND
9	GND	10	N/C(Key)

USB5

Function: USB3.0 port

Connector Type: USB3.0 type
A connector

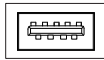


Setting:

Pin	Description	Pin	Description
1	VBUS	2	D-
3	D+	4	GND
5	StdA_SSRX-	6	StdA_SSRX+
7	GND	8	StdA_SSTX-
9	StdA_SSTX+		

P80P1


Function: Ext 80 port pin header

Connector Type: 2.00mm-pitch
2x5-pin female connector

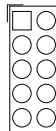

Setting:

Pin	Description	Pin	Description
1	CK_P33M	2	GND
3	L_FRAME_N	4	L_AD0
5	P_PCIRST_N	6	N/C
7	L_AD3	8	L_AD2
9	VCC3	10	L_AD1

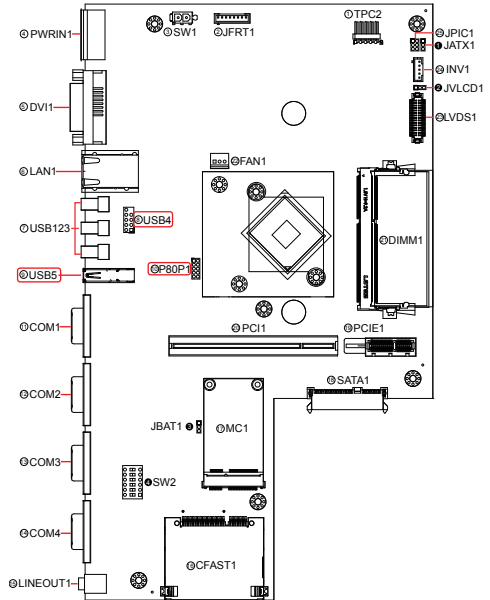


COM1~COM4

Function: COM1~4

Connector Type: 9-pin male-type DSUB connector

Setting:

RS-232

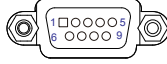


Pin	Description	Pin	Description
1	DCD	6	DSR
2	RXD	7	RTS
3	TXD	8	CTS
4	DTR	9	RI
5	GND		

RS-485 (COM1, COM2)

Pin	Description
1	D-
2	D+

LINEOUT1


Function: Audio Lineout connector **Green**

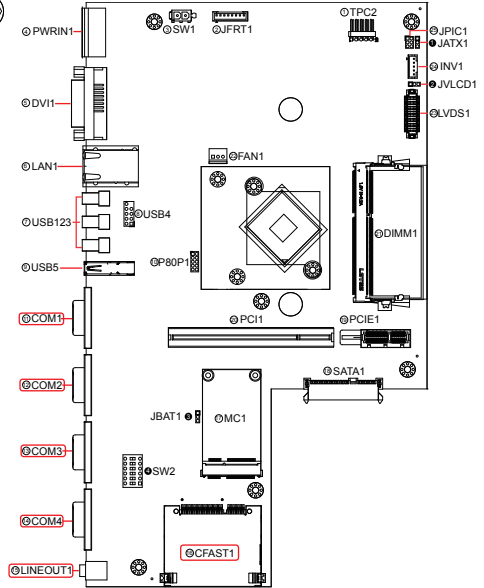

CFAST1



Function: CFAST card Type I/II socket

Connector Type: 7+17-pin CFAST card connector consisting of a SATA compatible 7-pin signal connector and a 17-pin power control connector.

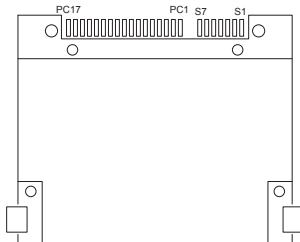

MC1

Function: PCI Express MiniCard socket
Connector Type: onboard 0.8mm pitch 52-pin edge card connector

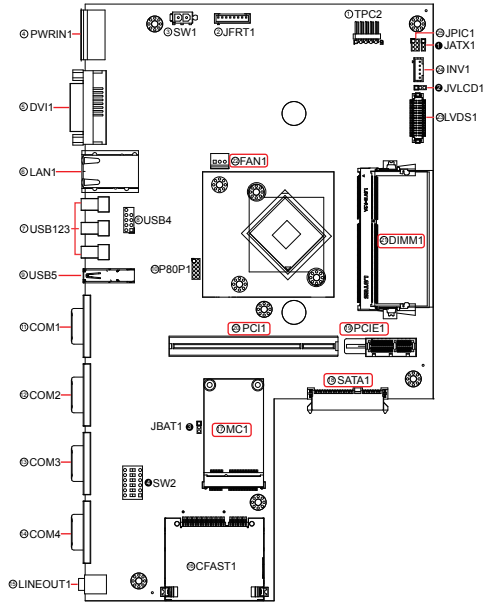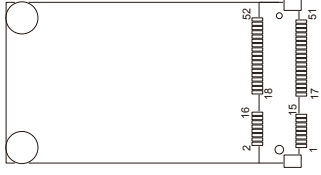

PCIE1


Function: PCIE x1 Slot

PCI1

Function: PCI 32-bit Slot

SATA1

Function: S-ATA1 connector
Connector Type: SATA port with data + power vertical connector (7+15pin)

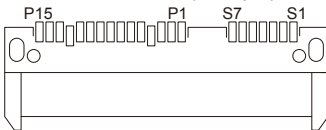

DIMM1

Function: SO-DIMM Memory sockets

FAN1

Function: CPU fan power connector



Connector Type: 2.54mm-pitch 1x3-pin wafer connector

Setting:


Pin Description

1	GND
2	+12V
3	NC

LVDS1


Function: LCD connector

Connector Type: DF-13-30DP-1.25mm connector

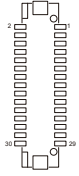

Setting:

Pin	Description	Pin	Description
2	VDD	1	VDD
4	TX2CLK+	3	TX1CLK+
6	TX2CLK-	5	TX1CLK-
8	GND	7	GND
10	TX2D0+	9	TX1D0+
12	TX2D0-	11	TX1D0-
14	GND	13	GND
16	TX2D1+	15	TX1D1+
18	TX2D1-	17	TX1D1-
20	GND	19	GND
22	TX2D2+	21	TX1D2+
24	TX2D2-	23	TX1D2-
26	GND	25	GND
28	TX2D3+	27	TX1D3+
30	TX2D3-	29	TX1D3-

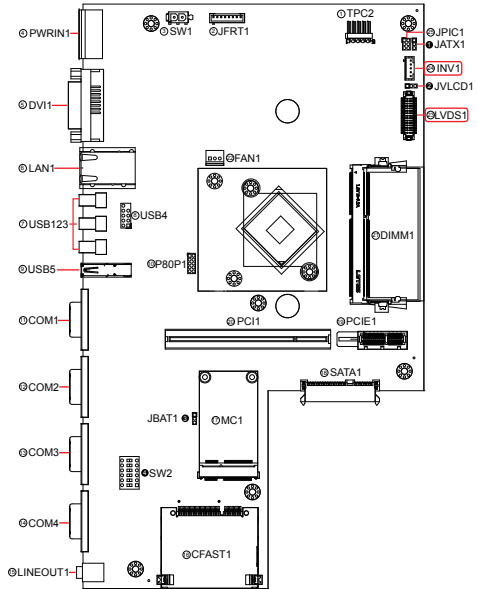

INV1

Function: inverter connector

Connector Type: 2.00mm-pitch 1x5-pin 4-wall wafer connector

Setting:




Pin	Description
1	+12V/+5V
2	GND
3	BL-ON
4	BL-Control
5	GND

JPIC1


Function: External PIC programming pin header

Connector Type: 2.00mm-pitch 2x3-pin header

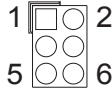

Setting:

Pin	Description	Pin	Description
1	NC	2	ICSP-CLK
3	ICSP-DAT	4	GND
5	VCC3	6	MCU_RST

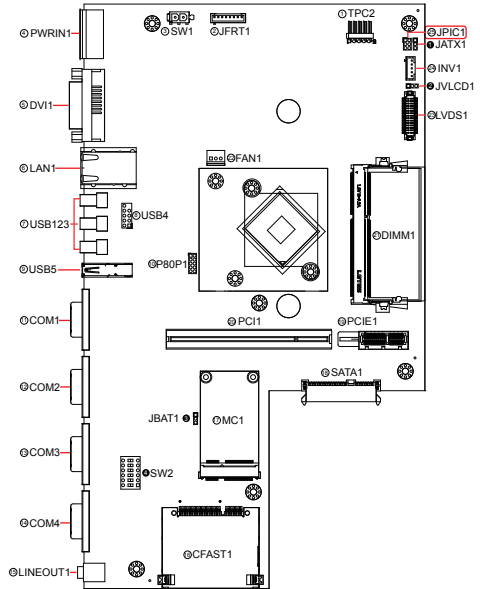

This page is intentionally left blank.


Chapter 4

Installation & Maintenance

4.1. Use Onboard Jumpers and Connectors


The computer's carrier board comes with some connectors to join some devices and also some jumpers to alter hardware configuration. Follow through the guide below to access these components inside the computer.

1. Loosen and remove the 8 screws from the computer's rear panel. Then, loosen and remove the 5 screws from each of the left and right panel of the computer.

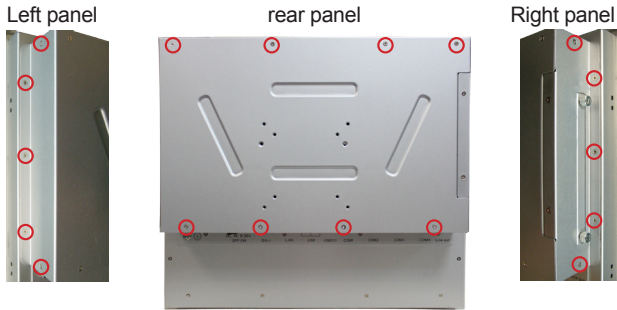

Remove the marked screws.

2. Dismount the rear cover from the computer. The inside of the computer comes to view.

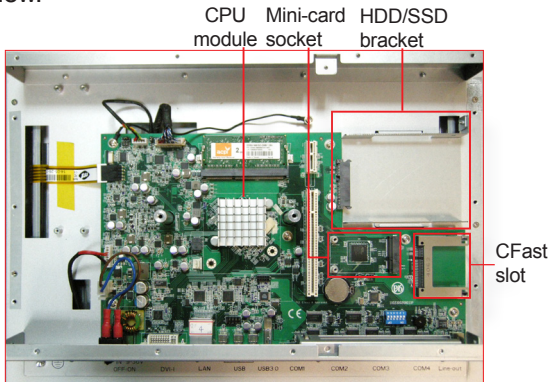

3. Adjust the jumpers or use the connectors on the carrier board as described in [3.2.1. Jumpers](#) on page [16](#) and [3.2.2. Connectors](#) on page [19](#).


4.2. Install Hardware

The following sections will guide you through the basic hardware installation for the computer. Remember to turn off the panel PC before installing/removing inner hardware.


4.2.1. Install SSD or HDD

The computer supports a 2.5" HDD or SSD to work inside the computer. To install a 2.5" HDD or SSD to the computer,


1. Remove the screw on the bracket and slide it out.

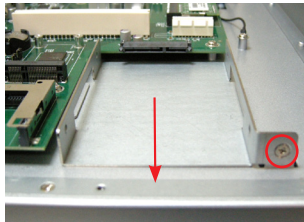

2. Slide a 2.5" HDD or SSD storage device into the bracket. Fix them together by using four screws at the bracket's both sides.

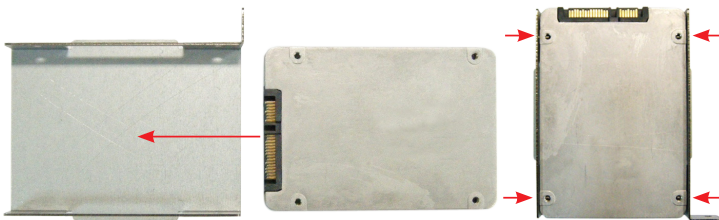


3. Slide the storage with bracket back and fix it with the screw.

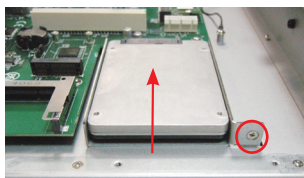


4.2.2. Install CFast Card

The computer comes with a CFast slot to power the computer with a CFast card. To install a CFast card to the computer:

1. Continued from the preceding section, locate the CFast slot on carrier board, or unscrew and take off the CFast slot door without the need to dismount rear panel.

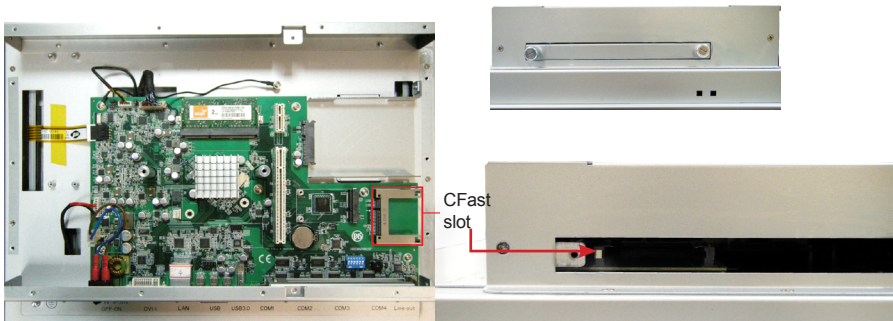

2. Have a CFast card. Push the CFast card into the slot so the card can be clicked in place. Push again to have the card ejected.

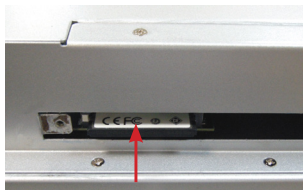

3. Restore the CFast slot door to the computer.

4.2.3. Install Wi-Fi Module

The computer comes with one Mini-card socket (USB Interface) to load the computer with a wireless module of PCI Express Mini-card form factor:

(See also [1.5.2. Configure-to-Order Service](#) on page 6.)

- If you have ordered the Wi-Fi module, see [Appendix A: Wi-Fi Module Hardware/Software Installation](#) to know how to install the hardware and software for the module.

4.2.4 Install PCI or PCIe Card

The computer comes with one PCI and one PCIe slot for expansion.

To install the PCI or PCIe card,

1. Please take out the riser card bracket, PCI or PCIe riser card from the package.




2. Fix the bracket and riser card with screws



Installation & Maintenance


3. Loosen and remove the screw as marked in the picture below. Carefully dismount the bracket.

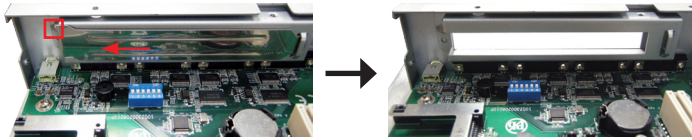


4. Insert the riser card into the PCI or PCIe Slot




5. Fix the bracket with screws

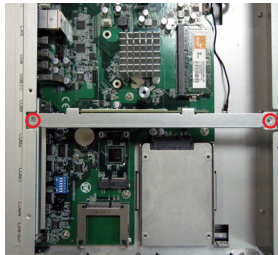

6. Insert a PCI or a PCIe card into the riser card slot

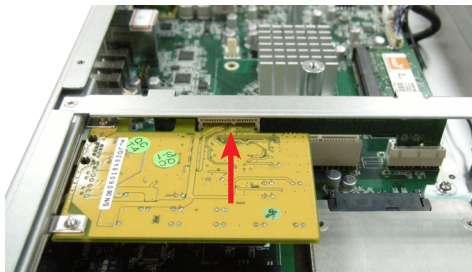


7. Fix the PCI or PCIe card with screws.

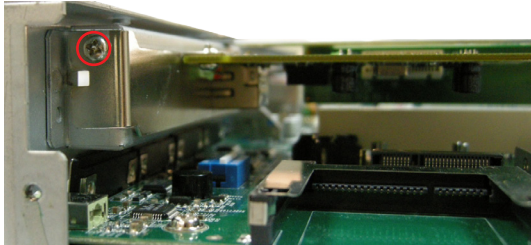


4.2.5 Install 2nd CFast module

1. Please take the CFast bracket and CFast module out of the package.
2. Fix the module on the bracket with screws
3. Remove the screw on the SSD bracket and slide it out.

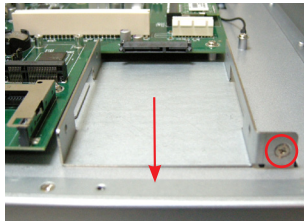

4. Slide the CFast module and bracket into the slot and fix it with a screw.

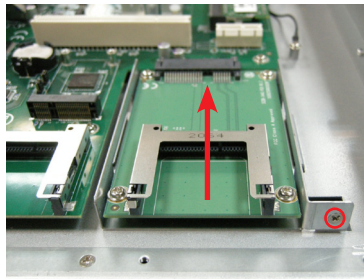


4.3. Mount the Computer

Integrate the computer to where it works by mounting it to a wall in the surroundings or to the rear of a display monitor. Similarly, the subsequent illustrations only take LYNC-715 for instance.

4.3.1. Panel Mounting

1. Have the panel-mounting clamps included in accessory pack. Put the clamps into holes around edges of the panel PC as below.

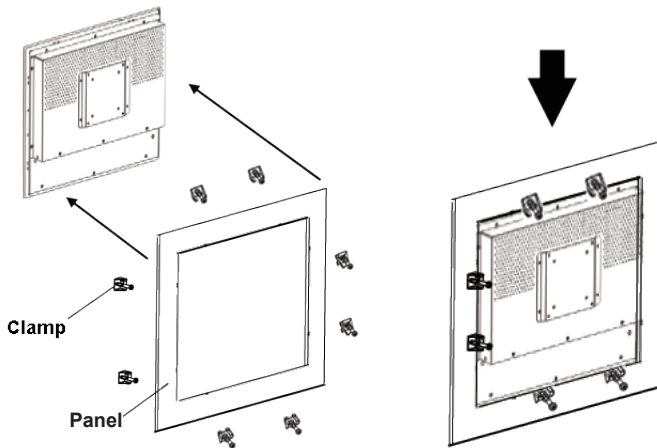


2. Put the panel PC into correct-sized frame on a wall or other devices, in this example — a transparent stand, and tightly screw panel-mounting clamps around edges.

4.3.2. VESA Mounting


4.3.2.1. Use VESA Arm

To integrate the computer to a VESA arm:

1. Find the VESA mounting holes on the Panel PC.

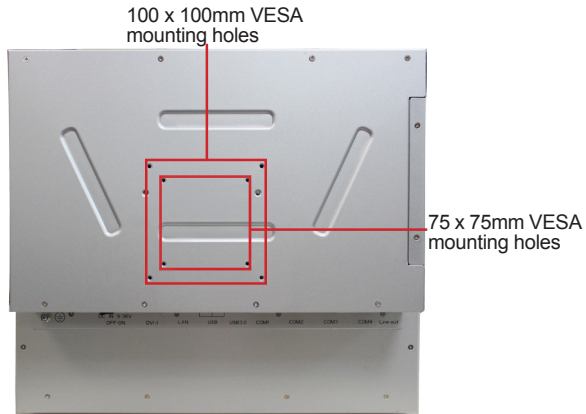

2. Attach the VESA arm to the rear of the computer by meeting the mounting holes on the VESA arm and VESA bracket.
3. Fix the assemblage with four screws.

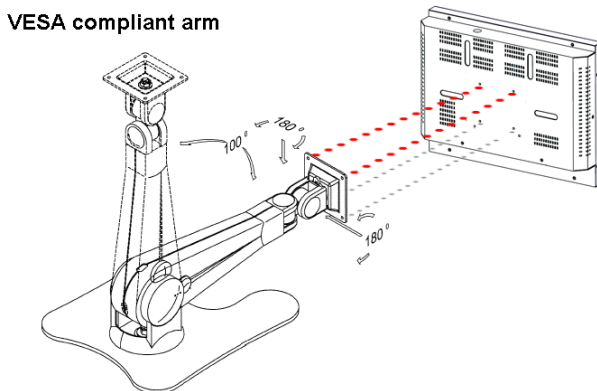



4.4. Wire DC-Input Power Source



Warning Only trained and qualified personnel are allowed to install or replace this equipment.

Follow the instructions below to connect the computer to a DC-input power source:

1. Before wiring, make sure the power source is disconnected.
2. Find the terminal block in the accessory box.
3. Use the wire-stripping tool to strip a short insulation segment from the output wires of the DC power source.
4. Identify the positive and negative feed positions for the terminal block connection.
5. Insert the exposed wires into the terminal block plugs. Only wires with insulation should extend from the terminal block plugs. Note that the polarities between the wires and the terminal block plugs must be positive to positive and negative to negative.
6. Use a slotted screwdriver to tighten the captive screws. Plug the terminal block firmly, which wired, into the receptacle on the rear panel.

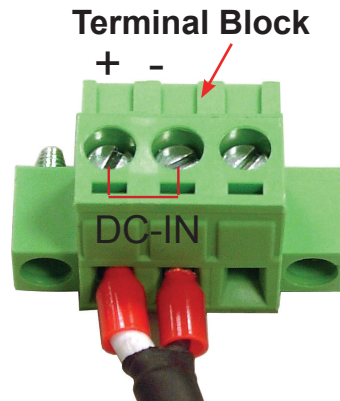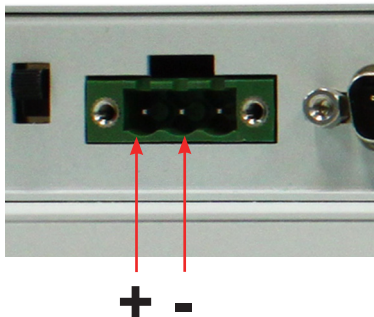


Chapter 5

BIOS

BIOS

The BIOS Setup utility for the computer is featured by American Megatrends Inc to configure the system settings stored in the system's BIOS ROM. The BIOS is activated once the computer powers on. When the computer is off, the battery on the main board supplies power to BIOS RAM.

To enter the BIOS Setup utility, keep hitting the "Esc" key upon powering on the computer.

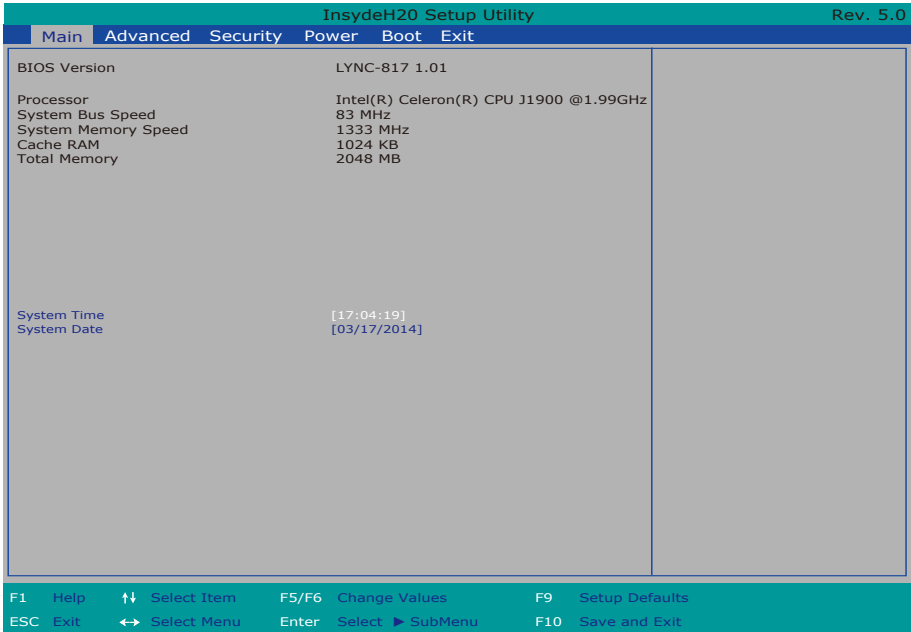

The BIOS featured menus are:

Menu	Description
Main	See 5.1. Main on page 40 .
Advanced	See 5.2. Advanced on page 41 .
Security	See 5.3. Security on page 44 .
Power	See 5.4. Power on page 45 .
Boot	See 5.5. Boot on page 46 .
Exit	See 5.6. Exit on page 47 .

Key Commands

The BIOS Setup utility relies on a keyboard to receive user's instructions. Hit the following keys to navigate within the utility and configure the utility.


Keystroke	Function
← →	Moves left/right between the top menus.
↓ ↑	Moves up/down between highlight items.
Enter	Selects an highlighted item/field.
Esc	<ul style="list-style-type: none"> ▶ On the top menus: Use Esc to quit the utility without saving changes to CMOS. (The screen will prompt a message asking you to select OK or Cancel to exit discarding changes. ▶ On the submenus: Use Esc to quit current screen and return to the top menu.
F5	Increases current value to the next higher value or switches between available options.
F6	Decreases current value to the next lower value or switches between available options.
F1	Opens the Help of the BIOS Setup utility.
F9	Restore the Setup Default (The screen then prompts a message asking you to select OK or Cancel to restore to default.)
F10	Exits the utility saving the changes that have been made. (The screen then prompts a message asking you to select OK or Cancel to exit saving changes.)

Note: Pay attention to the “WARNING” that shows at the left pane onscreen when making any change to the BIOS settings.

This BIOS Setup utility is updated from time to time to improve system performance and hence the screenshots hereinafter may not fully comply with what you actually have onscreen.

5.1. Main

The **Main** menu features the settings of **System Date** and **System Time** and displays some BIOS info and system info.

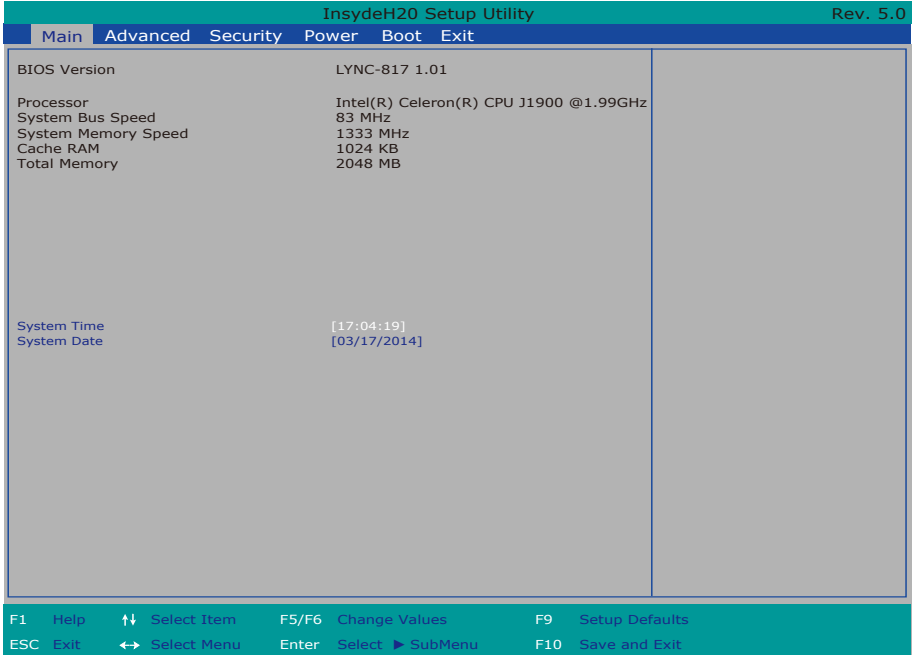

The BIOS info displayed are:


Info	Description
BIOS Version	Delivers the computer's BIOS version.
Processor Type	CPU and System BUS Information
RAM info	System Memory Speed, Cache RAM, Total Memory.

The featured settings are:

Setting	Description
System Time	Sets system time.
System Date	Sets system date.

5.2. Advanced

Access the **Advanced** menu to manage the computer's system configuration including the Super IO chip.

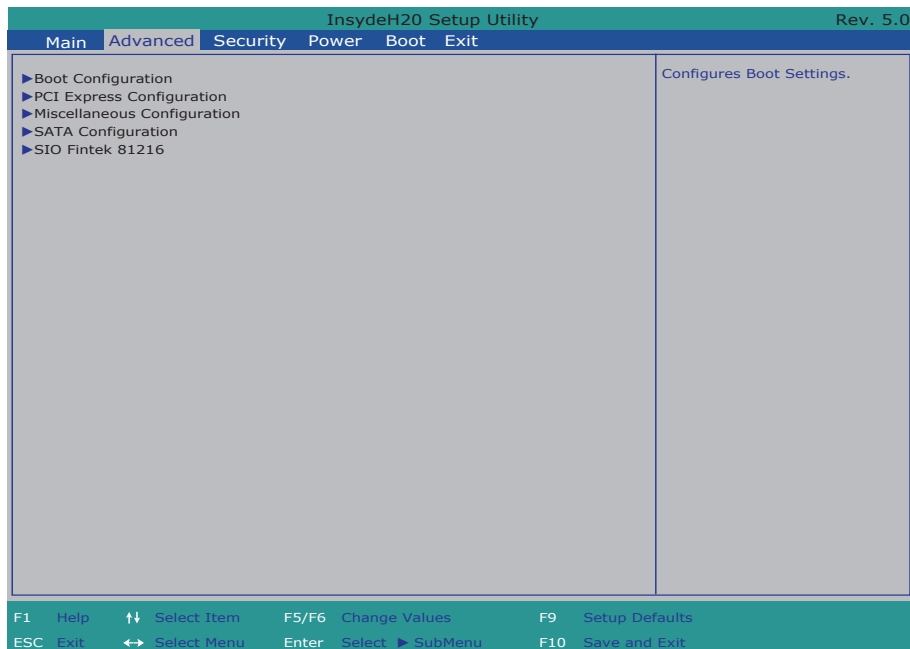

The featured settings and submenus are:

Setting	Description
Boot Configuration	See 5.2.1. Boot Configuration on page 42 .
PCI Express Configuration	See 5.2.2. PCI Express Configuration on page 42 .
Miscellaneous Configuration	See 5.2.3. Miscellaneous Configuration on page 43 .
SATA Configuration	See 5.2.4. SATA Configuration on page 43 .
SIO Fintek 81216	See 5.2.5. SIO Fintek 81216 on page 43 .

5.2.1. Boot Configuration

Setting	Description
Numlock	Select Power-on state for Num lock

5.2.2. PCI Express Configuration

Configures PCI Express by the following settings:

Setting	Description
PCI Express Root Port 1/2/3/4	<ul style="list-style-type: none"> ▶ PCI Express Root Port Enables/disables this PCIe port. ▶ PCIe Speed Options are: Auto, Gen 1, Gen 2 Auto is the default. ▶ ASPM Support Options are: Disable : disables ASPM L0s : force all links to L0s state L1 : force all links to L1 state L0sL1 : force all links to L0s+L1 state Auto : BIOS auto configure

5.2.3. Miscellaneous Configuration

Setting	Description
State After G3	Set the state of System when power is re-applied after a Power failure (G3 state) Options are S0 State(default)/S5 State

5.2.4. SATA Configuration

Select this submenu to configure the SATA controller.

Setting	Description
SATA Controller(s)	Enables/disables the present SATA controller. ▶ Enabled is the default.
Chipset SATA Mode	Configures how to run the SATA drives. ▶ Options available are AHCI (default) and IDE .
Serial ATA Port 0	Delivers the SATA port Media information
Serial ATA Port 1	


5.2.5. SIO Fintek 81216

This submenu configures the computer's Super IO chip, Fintek F81216, for the serial port A~D.

Setting	Description
Serial Port A, B	Enable (default) or Disable Serial Port (COM)
COM Port Type	Set the mode of Serial port. Options: RS232 (default) RS485
Serial Port C, D	Enable (default) or Disable Serial Port (COM)

5.3. Security

The **Security** menu sets up the password for the system’s supervisor account. Once the supervisor password is set up, this BIOS Setup utility is limited to access and will ask for the password each time any access is attempted.

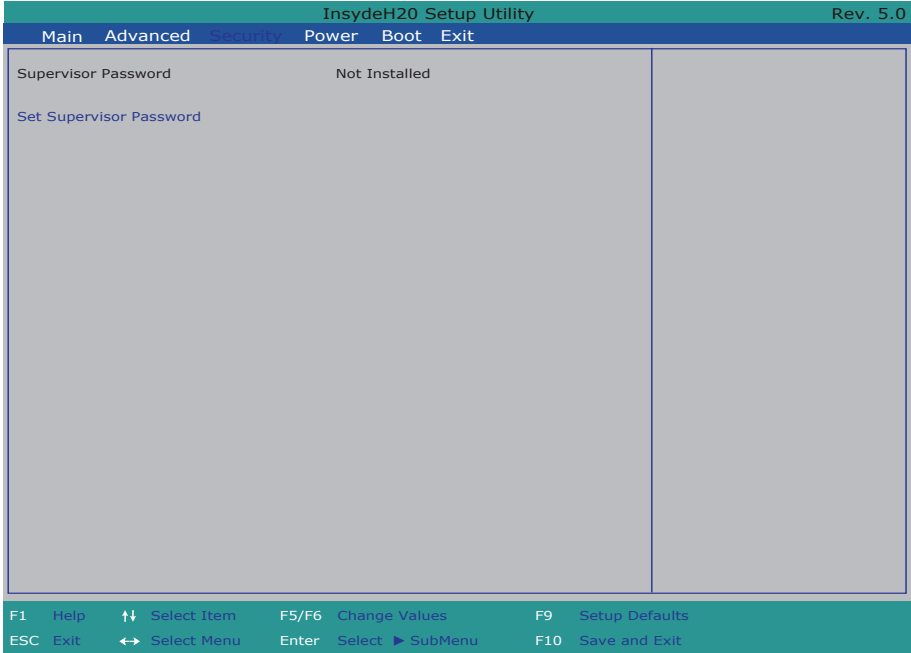


The featured setting is:

Setting	Description
Set Supervisor Password	<p>To set up an administrator password:</p> <ol style="list-style-type: none"> 1. Select Set Administrator Password. An Set Administrator Password dialog then pops up onscreen. 2. Enter your desired password that is no less than 3 characters and no more than 20 characters. 3. Hit [Enter] key to submit.

5.4. Power


The Power menu sets up the power option of system

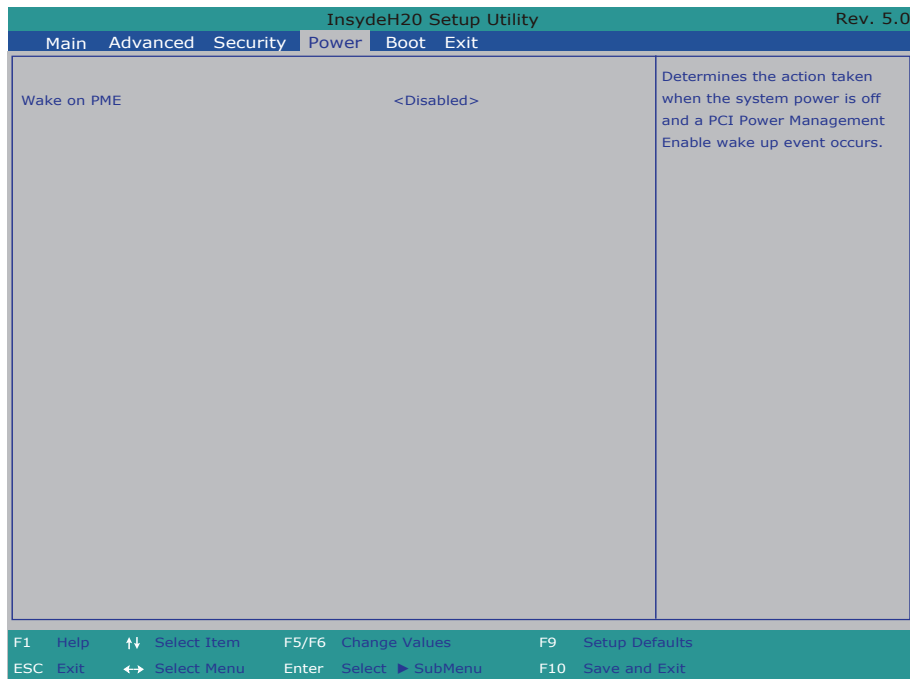

Setting	Description
Wake on PME	Enables or disables Wake on PME. Determines the action taken when the system power is off and a PCI Power Management Enable wake up event occurs.

5.5. Boot

The **Boot** menu configures how to boot up the system such as the configuration of boot device priority.

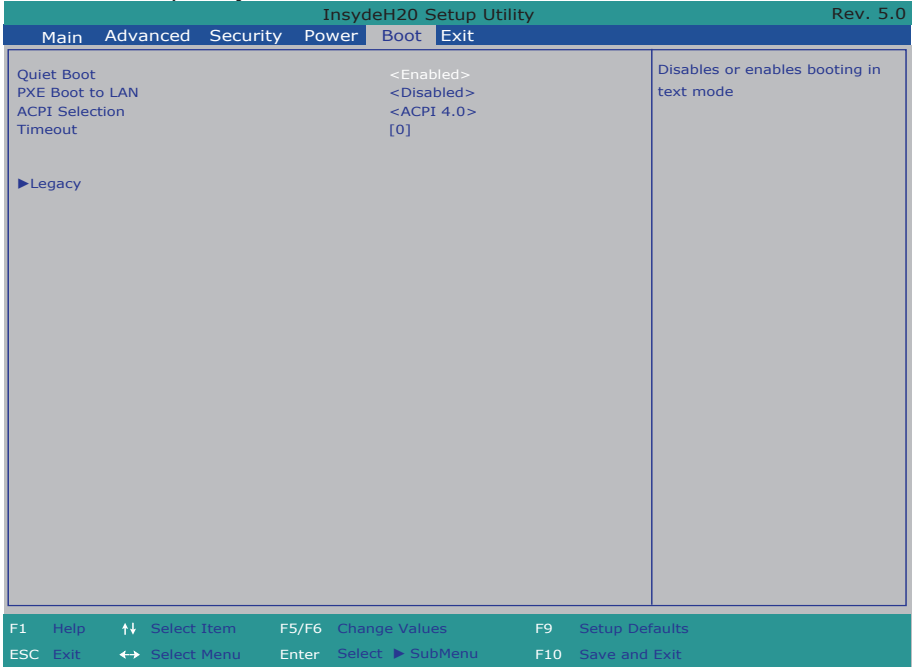


The featured settings are:

Setting	Description
Quiet Boot	Disables or enables booting in text mode.
PXE boot to LAN	Disables or enables PXE boot to LAN.
APCI Selection	Select boot to Acpi 3.0/Acpi 1.0B Options are Acpi 1.0B/Acpi 3.0/Acpi 4.0/Acpi 5.0
Timeout	Set the waiting seconds before booting the default boot selection
Legacy	Boot Device Priority Normal Boot Menu Select Normal boot option priority or Advance boot option Priority. Boot type order Change boot type order Hard Disk Drive Change CD/DVD-ROM Drive Boot order

5.6. Exit

The **Exit** menu features a handful of commands to launch actions from the BIOS Setup utility regarding saving changes, quitting the utility and recovering defaults.

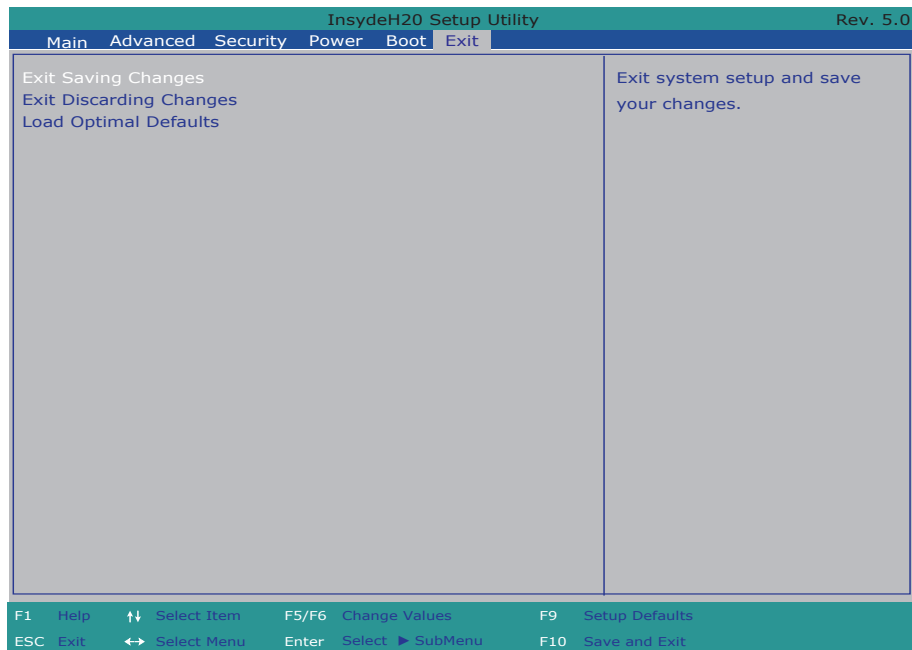

The features settings are:

Setting	Description
Exit Saving Changes	Exit system setup after saving the changes. ▶ Enter the item and then a dialog box pops up: Exit Saving Changes?
Exit Discarding Changes	Exit system setup without saving any changes. ▶ Enter the item and then a dialog box pops up: Exit Discarding Changes?
Load Optimal Defaults	Restore/Load Default values for all the setup options. ▶ Enter the item and then a dialog box pops up: Load Optimized Defaults?

This page is intentionally left blank.


Appendices

Appendix A: Wi-Fi Module Hardware/Software Installation

To use Wi-Fi, hardware-wise the computer needs a Wi-Fi module installed, and software-wise the computer needs the device driver and an application program. This appendix will guide you to install the Wi-Fi module and the device driver. (To have a copy of the device driver, please contact ARBOR customer service by the contact info described in [Technical Support](#) on page [vi](#).)


A.1. Install Wi-Fi Module

1. Loosen and remove the 8 screws from the computer's rear panel. Then, loosen and remove the 4 screws from each of the left and right panel of the computer.

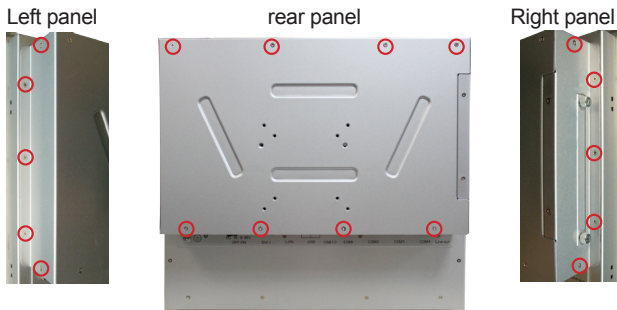


Remove the marked screws.

2. Dismount the rear cover from the computer. The inside of the computer comes to view.

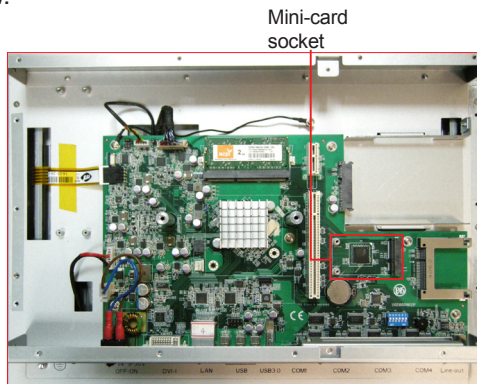


3. Please take out the riser card bracket and PCIe x 1 riser card from accessory box.

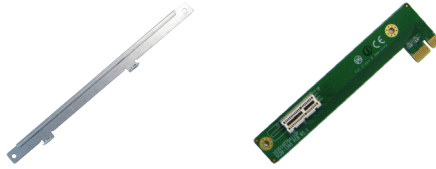

4. Fix the bracket and riser card with screws




5. Loosen and remove the screw as marked in the picture below. Carefully dismount the bracket.

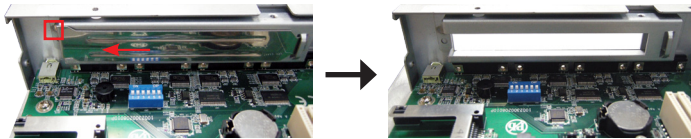

6. Insert the riser card into the PCIe Slot




7. Fix the bracket with screws

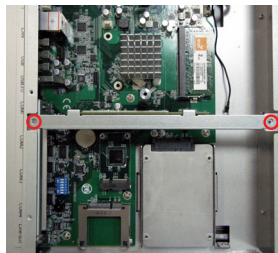

Appendices


8. Prepare the Wi-Fi module kit. The module is a half-size module of PCI Express Mini-card form factor, with two U.FL connectors, one is “MAIN” or “0”, and the other is “AUX” or “1”.

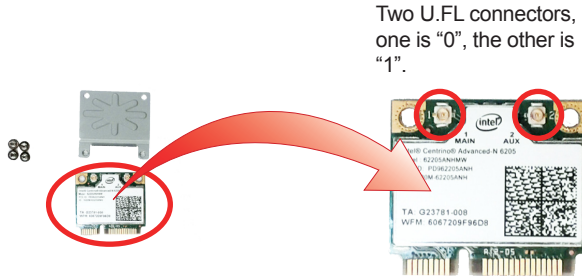


9. In order to make the half-size Wi-Fi module compatible with the Mini-card socket, extend the Wi-Fi module with a “mini half bracket”. Join them together by using two screws.




10. Connect the antenna cable to the connector marked “1” on the mini-card.

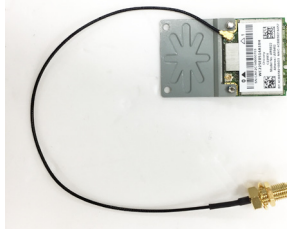


11. Prepare the adapter card - ELPP-0101-C224. Insert the WiFi module into the mPCIe slot on the adapter card, and fix the “mini-half bracket” with the latches on the card.

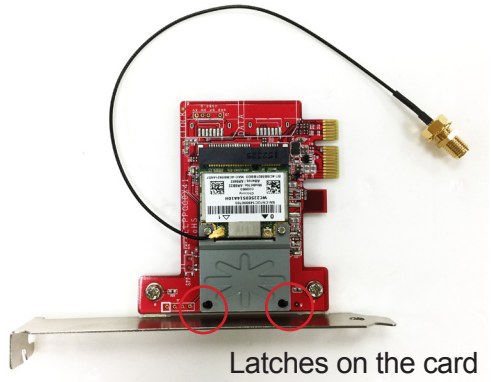


12. Install the adapter card to PCIe x 1 connector on riser card, and fasten the adapter bracket to the computer with the screw as shown below.

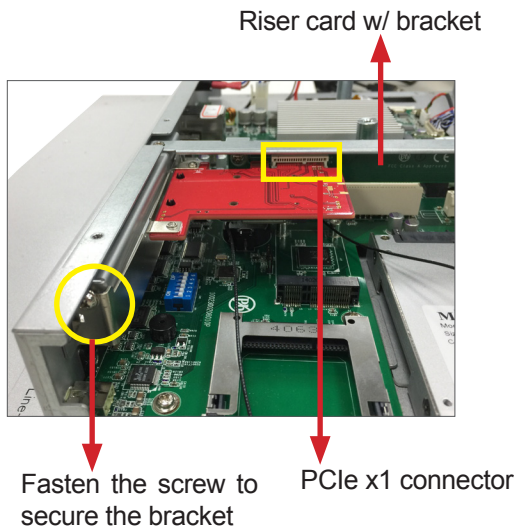

13. Thread the SMA end of antenna cable through the ANT hole. Note that the SMA connector comes in the form of a threaded bolt, with one flat side. Make sure to align the connector's flat side with the hole's flat side.

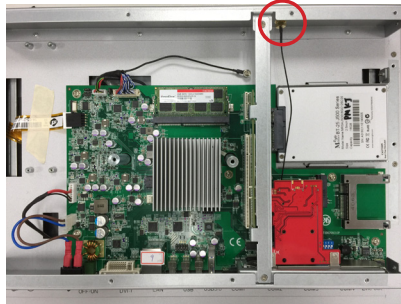


14. Mount the washer first and then the nut to the SMA connector.
15. Restore the rear panel to the computer. Have your external antenna. Screw and tightly fasten the antenna to the SMA connector. Swivel the antenna to an angle of best signals.

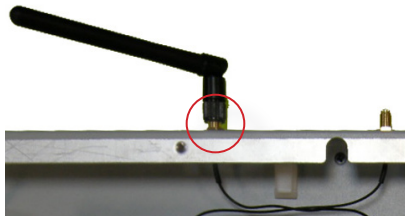


Appendix B: PenMount Utilities

B.1. PenMount Control Panel


After everything is installed properly, there will be a touch screen application named **PenMount Control Panel** in **All Programs**. Execute this application.

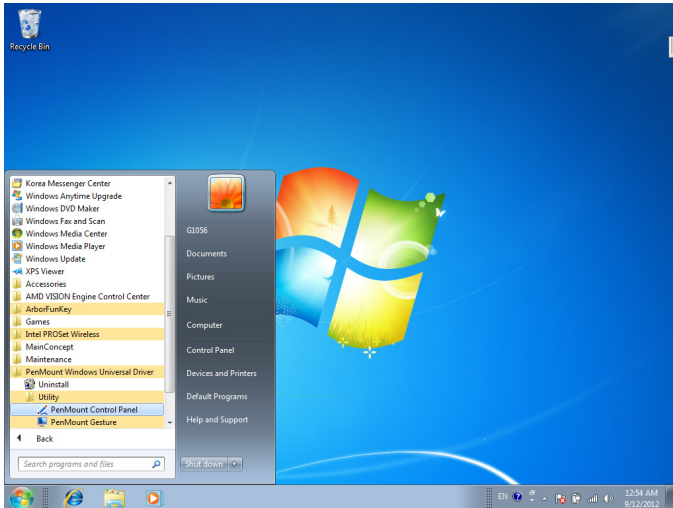

1. The program consists of 3 tabs. The left one is **Device**, in it, you can find how many devices are detected in your system. Select one device icon and tap **Configure**, or double tap the device icon for touch screen calibration.

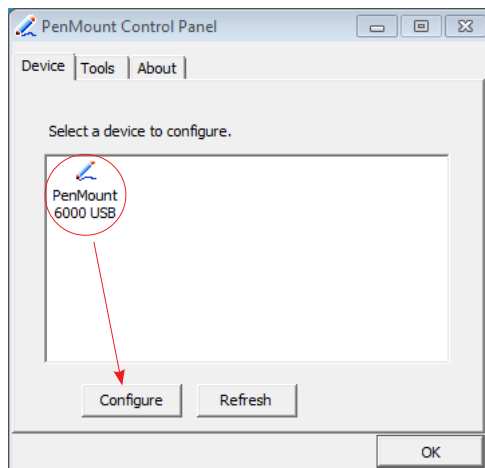

2. And then another window with **Calibrate** tab will jump out.

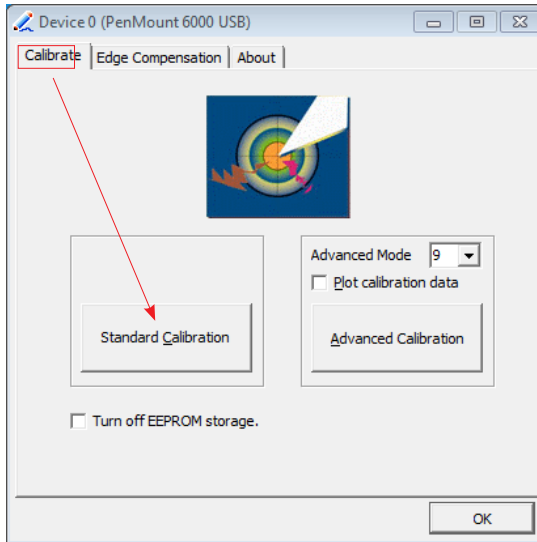

Device Calibration Dialog

a. The Calibrate Tab

This function offers two ways to calibrate your touch screen. ‘**Standard Calibration**’ adjusts most touch screens while ‘**Advanced Calibration**’ adjusts aging touch screens.

a.1 Standard Calibration

The Standard Calibration function lets you match the touch screen to your display so that the point you touch is accurately tracked on screen. Standard Calibration only requires four points for calibration and one point for confirmation. Under normal circumstance, Standard Calibration is all you need to perform an accurate calibration.

- i. Please tap the Standard Calibration button to start calibration procedures.
- ii. After that, the 1st crosshair will appear on white screen. Use your finger or stylus to touch the red center and hold down until the screen shows the message - “Lift off to proceed”.
- iii. The 2nd crosshair follows immediately. Do the process again. After the fifth red point calibration is complete, the program will jump out automatically, or you may press ESC key to quit it during calibration process. Alternatively, doing nothing for a while equates to pressing ESC.



a.2 Advanced Calibration

The Advanced Calibration function improves the accuracy of calibration by using more involved engineering calculations. Use this function only if you have tried the Standard Calibration and there is still a discrepancy in the way the touch screen maps to the display. You can choose 9, 16 or 25 points to calibrate, though we suggest that you first try 9 points, if it is still not tracking well then try 16 or 25 points. The more points you use for calibration, the greater the accuracy is. Errors in calibration may occur due to viewing angle, or individual skill, and there may be little difference in using 16 or 25 points. Note that a stylus is recommended for most accurate results.


Plot Calibration Data

Check this function to have touch panel linearity comparison graph appear when you finish Advanced Calibration. The black lines reflect the ideal linearity assumed by PenMount's application program while the blue lines show the approximate linearity calculated by PenMount's application program as the result of user's execution of Advance Calibration.

Turn off EEPROM storage


Tick this function to disable the write-in of calibration data in Controller.

Please tap the Advanced Calibration button to start calibration procedures and do the rest as explained in Standard Calibration.


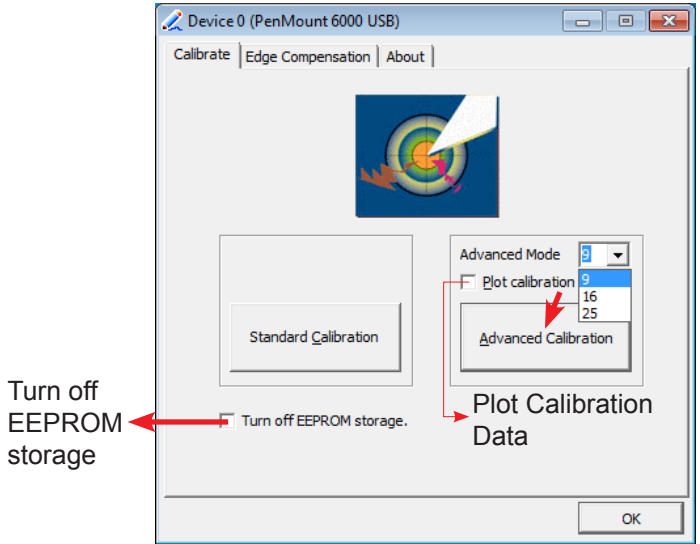


b. The Edge Compensation Tab

Under the same level where you calibrate your screen, you may find the tab. This tab is the edge compensation settings for the advanced calibration. You can adjust the settings from 0 to 30 for accommodating the difference of each touch panel.


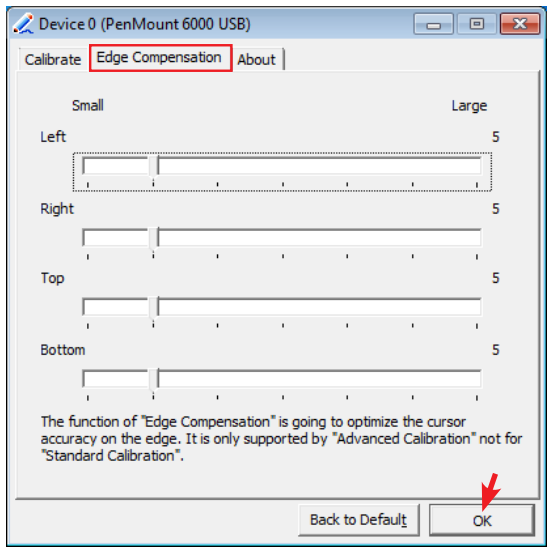


3. Press **OK** to close former window and back to upper level. As mentioned before, the program consists of 3 tabs, and the central one is **Tool**, switch to it and click **Draw** to test PenMount touch screen operation.

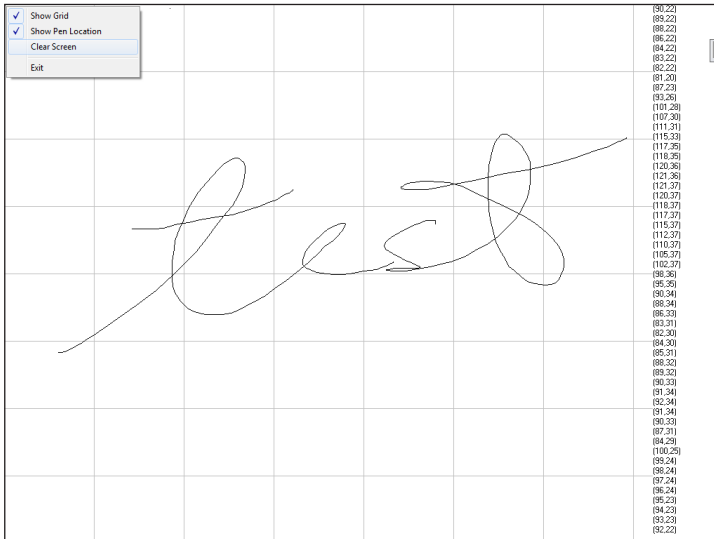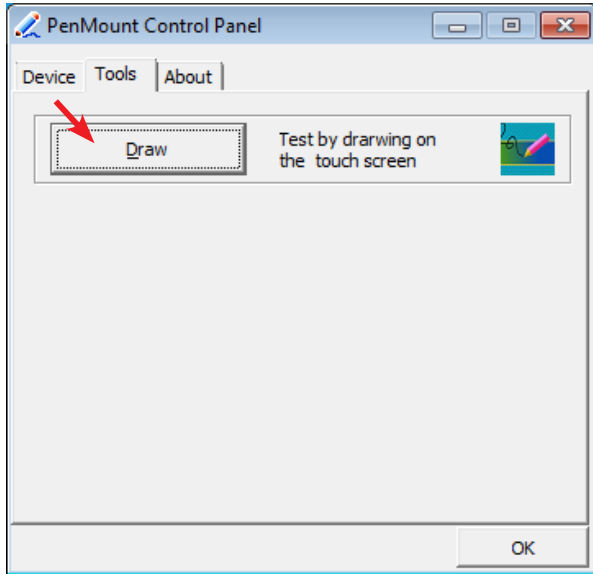


B.2. PenMount Gesture


1. Now that this tablet PC supports touchscreen function, you may take advantage of that to set hotkey or do other settings. Single-click a small icon like a monitor in system tray. If it's absent, you can recall it from **All Programs**. The default setting is inactive, so you need to click "Gesture Setting" to start the program.

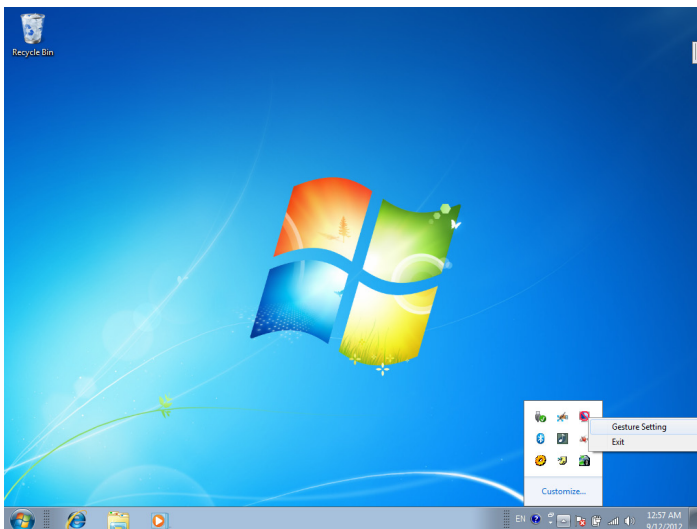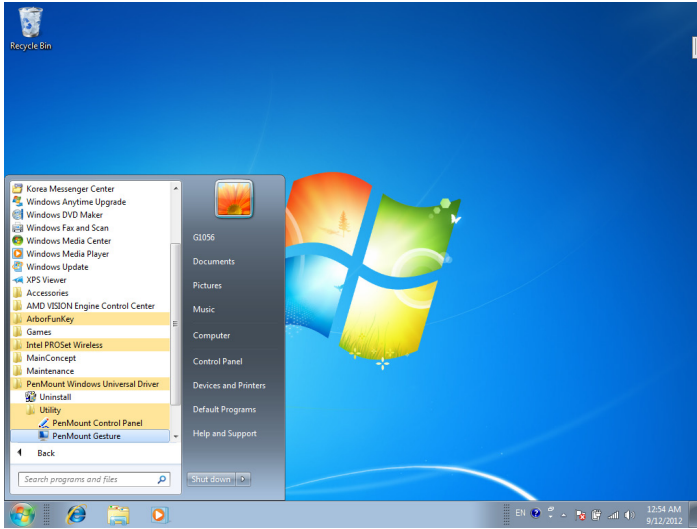

2. Check “Enable” and click the upward arrow in red square. You may also disable gesture function by canceling “Enable” box.

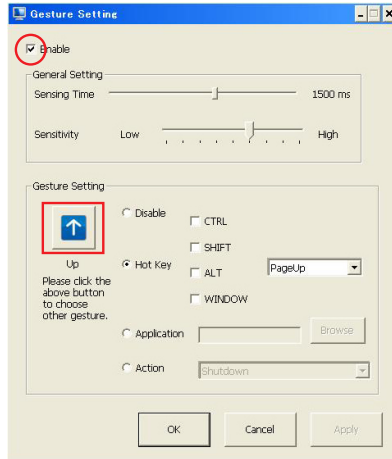

3. And then another **Gesture Select** window will pop up. Each mark in this menu represents your gesture on screen. For example, the upward arrow indicates that you move your finger across the touch screen from bottom to top. The rest are similar. You may use your gesture applied on the touchscreen to do further configuration. Select a gesture you would like to define.

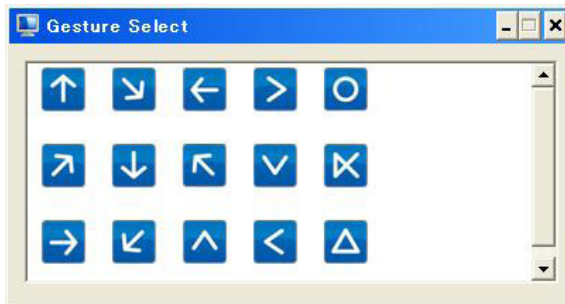

4. Then again, choose **Hot Key**, **Action** or **Application** to set each gesture's corresponding function. You may disable respective gesture, too. And remember to press **Apply** after all.

